

IPC Fast Operation User Manual

HD-IP CAMERA



 
Please refer to the complete User manual

Features

Δ Vandalproof IR Dome Camera

- Δ Advanced H.264 High profile compression
- Δ Support browsers: IE
- Δ Support several servers, IP address, DDNS, FTP, SMTP
- Δ Support single, dual, three streams
- Δ Support iPhone, iPad, Android remote monitor
- Δ Support connect to NVR
- Δ Support ONVIF2.0
- Δ Reliability and compatibility
- Δ Low streams and high resolution image

Connection

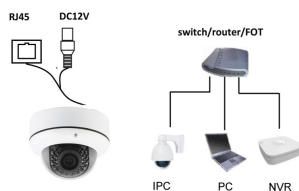

Network Structure

Specifications

Model	DIP-3130
Image Sensor	1/3" Sony Low Illumination 1.3 Megapixel CMOS Sensor
Resolution	1280×960
Minimum Illumination	>0.1Lux
S/N Ratio	>50db
Focus Mode	Manual Focus
Day/Night	IR cut filter with auto switch, IR sensor.
Network	1 RJ45 Ethernet interface, 10/100M adaptation
Delay	Within The LAN 0.3S
Frame Rate	25/30 FPS (adjustable)
Video Compression	H.264 /JPG
Protocol	RTSP/FTP/DDNS/NTTP/SMTP
POE	Yes(optional)
Onvif	Support Onvif 2.0 (port:8999)
User Permission	Multi-user Classification Management
Power/Current	DC 12V/1A or POE
Consumption	3.0W
Lens	2 Megapixel HD 2.8-12mm Manual Zoom Lens
IR Status	IR LED: 6 5X21 PCS IR range: 20M
Dimension (mm)	Φ 148 x 111(H) mm
Weight (g)	1200
Temperature	-10~55℃
Humidity	0%-90%RH, Without Condensation

NO.	Name	Model	Number (pcs)
1.	HD-IP Camera	DIP-3130	1
2.	CD	DIP-3130	1
3.	IPC Fast Operation User Manual	DIP-3130	1

 
 
 
Access to the IP Camera via IE

1. Use correct power supply.
2. Make sure the device IP address is in the same LAN with the router, the default IP address of the IPC is 192.168.1.168.
3. Go to CD->IPCSearch.exe and copy it to your computer.
4. Open IPC Search, click "Search", you will find the device IP, and you also can modify the IP information, see the picture (1)
5. Factory default IP setting:
IP Address : 192.168.1.168
Subnet Mask: 255.255.255.0
Gateway: 192.168.1.1
User name: admin
Password: admin
6. After modifying IP, click "Search" again, you will find the new IP of the your device. Double-click the new IP, you can access to the IPC via IE, or enter the IP address in the address bar of IE, then click "Enter", the download_OCX controls interface please see the picture (2). Please click here to download the OCX controls.
7. as is shown in picture (3). Click run, the system will automatically download the OCX.
8. Click "yes" as the picture (4). Then it will install the OCX, when complete. Click "OK" and refresh the page. You will enter the login interface, as is shown in picture (5)
9. Enter your username and password, you can start to access and control your IP Camera.




Access to the IP Camera via HSCMS

Go to CD, find "HerospeedCMS.exe." Copy "HerospeedCMS.exe" to your computer and install it, then run it. See the picture (6):

1. Device list:
See the picture (7): Here you can manually add your IP Cameras. Also can click "Search device" to search your IP Cameras in local area network.



You can add different areas to manage your device. Below the area you can search all the devices in LAN, then check the IP info to add the camera. See the picture (8): You also can click "Manually add" to enter the IP info manually. See the picture (9): Then you can view the images and remote config the IP Camera, such as Alarm, Video, Net, Camuser, Date, etc. Please refer to Herospeed CMS Customer Manual for detail.

   

of the software, click it to run.

1. Login
The picture (10) shows the login interface:

2. List
As is shown in picture (11)

- 2.1 Add Camera
Click "add camera", as is shown in picture (12):

- 2.1.1 Add Camera
Edit the camera name, input the username, password, you can input the camera ID manually or scan the QR code directly. Click "finish" to finish and save it.

3. Video Mode
Click to set the Video Mode.

4. Settings
Click to set the IPCs as is shown in picture (13):

- 4.1 User name password management
Here you can edit the device name, username and password.

- 4.2 Network Settings
Here you can set the local network and WIFI according to your need.

- 4.3 Basic information
Here you can view the basic information of the IPC, including device information, storage information, etc.

- 4.4 Parameter settings
Here you can set some parameters of the IPC, including Video quality, Time setting, Mail settings, Frequency setting, Chroma Setting, and Visu Alange Settings

- 4.5 Alarm settings
Here you can set alarms, including Motion Detect, Audio Alarm, I/O Alarm, Privacy Covered alarm, Timing to capture, Timing to record.

- 4.6 Init settings
Here you can Restore Factory Set and Restart the system of IPC.

- 4.7 Live View
When playing the video, you can capture, record, open/close the audio or mic; if the IPC supports PTZ, you can slide up, down, left and right on the screen. As is shown in figure (14).

5. Images View
Click "Images View" to playback pictures.

6. Video View
Click "Video View" to playback records.

7. About
Here you can view the information of the monitor software.

8. Access to the IP Camera via iPhone
Search and install the surveillance software "Danale" on line to your mobile from App store. Then you can see the icon of the software, click it to run.

1. Login
Input username and password, click "Login" in the "List" interface.

2. List
As is shown in figure (15):

- 2.1 Add Camera
Click to add camera, you will see the camera name, input the username, password, you can input the camera SN manually or scan the QR code directly.

3. Video Mode
Click "VideoMode" on the top right to set the mode of the video, including high definition, standard definition and Automatically.

4. Settings
Click to set the IPC. See the picture (16) on the right:

- 4.1 User name password management
Here you can edit the device name, username and password

- 4.2 Basic information
Here you can view the basic information of the IPC, including device information, storage information, etc.

- 4.3 Why can not show the whole interface?
Close some options of IE.
Steps: Open IE, click "View" and select "Toolbar", close the "Favorites bar", "Status bar" and "Command bar".

- 4.4 Why cannot I watch the mobile surveillance video after entering the login information?
A. Please check whether the settings page, server, port, user name, password and other information are filled in correctly.
B. Please check your network to see whether your phone is connected to the external network.
C. If your device is connected to the external network via router, please check whether the mobile port mapped in the routing. (For mapping settings, please refer to the router manual).
D. Please check whether the IP address you have filled in is the LAN IP (If your IP starts with the following format, it is a local area network: 10.x.x - 172.x.x - 192.x.x. If you use such IP, you can only be in the same LAN with the device to be connected).
E. Please check your port to ensure that it must be the mobile port.

- 4.5 Why does it show "Get Param Failed"?
1. Please check the IP information, such as port.
2. Please make sure the IP Camera connected correctly.
3. The network status is poor.

- 4.6 I have already added the device, why it shows "Initial Failed"?
Solution: Please delete the device and add it again.

- 4.7 The Important Safety Information
Please be sure to read the following important safety information before install and use the product.

- 4.8 CAUTION:
RISK OF ELECTRIC. DO NOT OPEN

- 4.9 CAUTION:
TO REDUCE THE RISK OF ELECTRIC DO NOT REMOVE COVER OR BACK NO USER SERVICE/CAUTION PARTS INSIDE. REFER SERVING TO QUALIFIED SERVICE PERSONNEL.

- 4.10 CAUTION:
TO PREVENT ELECTRIC SHOCKS AND RISK OF FIRE HAZARDS, DO NOT USE OTHER THAN SPECIFIED POWER SOURCE.

- 4.11 Notes:
● The power supply must through safe attestation. Its output voltage, current, voltage polarity and operating temperature must match the camera's requirement.
● When using the camera in the thunderbolt condition, please note to mount Anti-thunder device or put off the power supply plug and cable.
● In order to capture high quality pictures, the power supply's cable and video output cable should not be too long.